InfraCal TOG/TPH Analyzer,
Model CVH
Calibration



wilks
simple analytical solutions

www.WilksIR.com

Calibration Oil

- Heavy hydrocarbon
- No volatiles
- No Additives

Mixing Standards – Volume/volume

ppm	Oil	Solvent
400	40ul	10 ml
300	30ul	10 ml
200	20ul	10 ml
100	10 ul	10 ml

First Standard: 100 ppm

- Add 10-ml of solvent to the 10-ml graduated cylinder

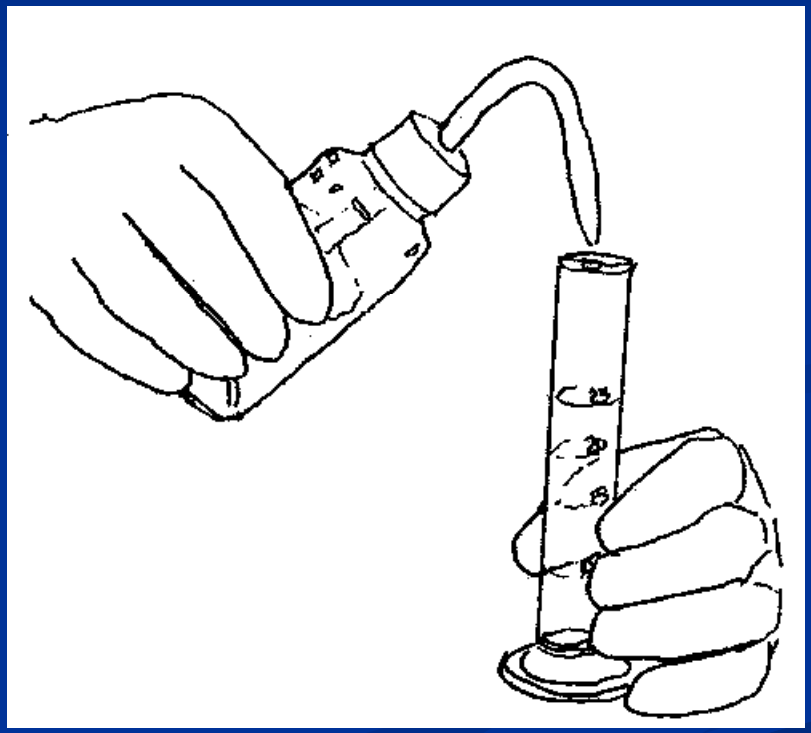

First Standard: 100 ppm

- Add 10-ml of solvent to the 10-ml graduated cylinder

- Using the syringe add 10 microliters of oil to 10-ml of solvent in the graduated cylinder

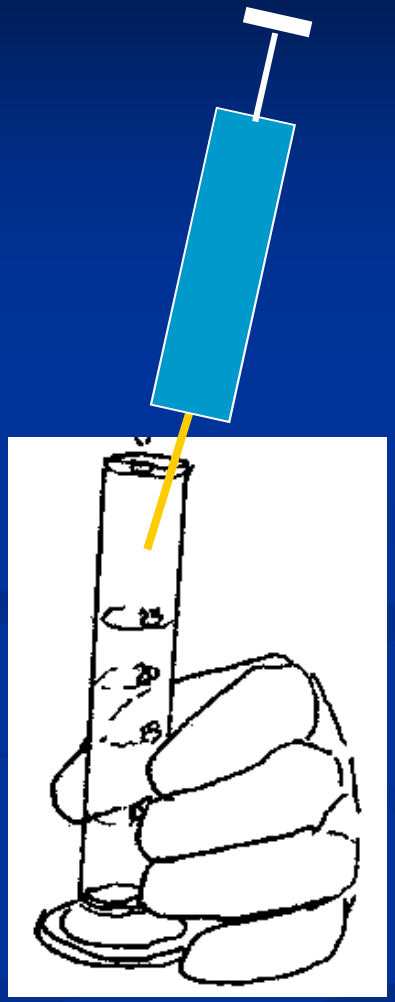

First Standard: 100 ppm

- Add 10-ml of solvent to the 10-ml graduated cylinder

- Using the syringe add 10 microliters of oil to 10-ml of solvent in the graduated cylinder

- Pour this standard into a vial labeled “100 ppm”

- Shake to mix

Second Standard: 50 ppm

- Pour 5-ml of the 100 ppm standard back into the 10-ml graduated cylinder

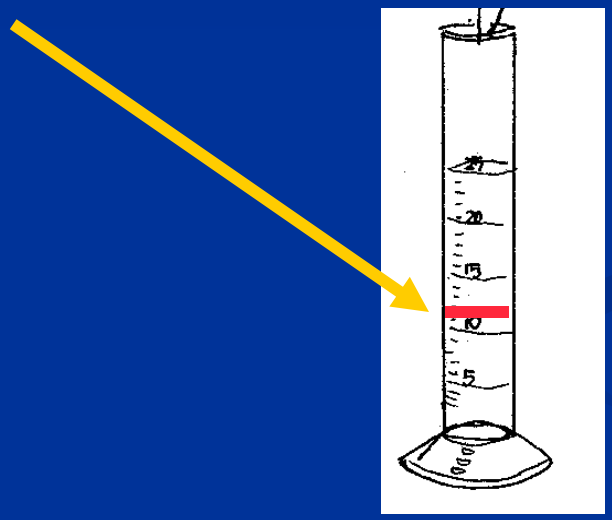

Second Standard: 50 ppm

- Pour 5-ml of the 100 ppm standard back into the 10-ml graduated cylinder
- Fill the cylinder to 10-ml with clean solvent

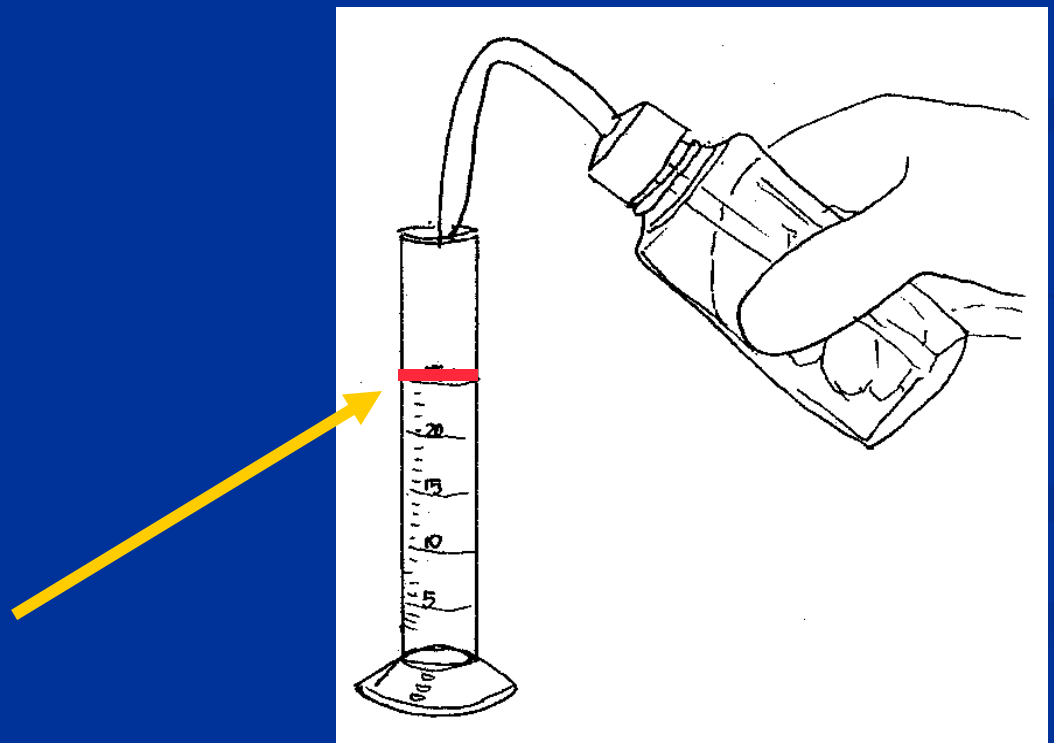

Second Standard: 50 ppm

- Pour 5-ml of the 100 ppm standard back into the 10-ml graduated cylinder
- Fill the cylinder to 10-ml with clean solvent
- This will cut the 100 ppm standard in half to be 50 ppm
- Pour this standard into a vial labeled “50 ppm”
- Shake to mix

Third Standard: 25 ppm

- Pour 5-ml of the 50 ppm standard back into the 10-ml graduated cylinder
- Fill the cylinder to 10-ml with clean solvent

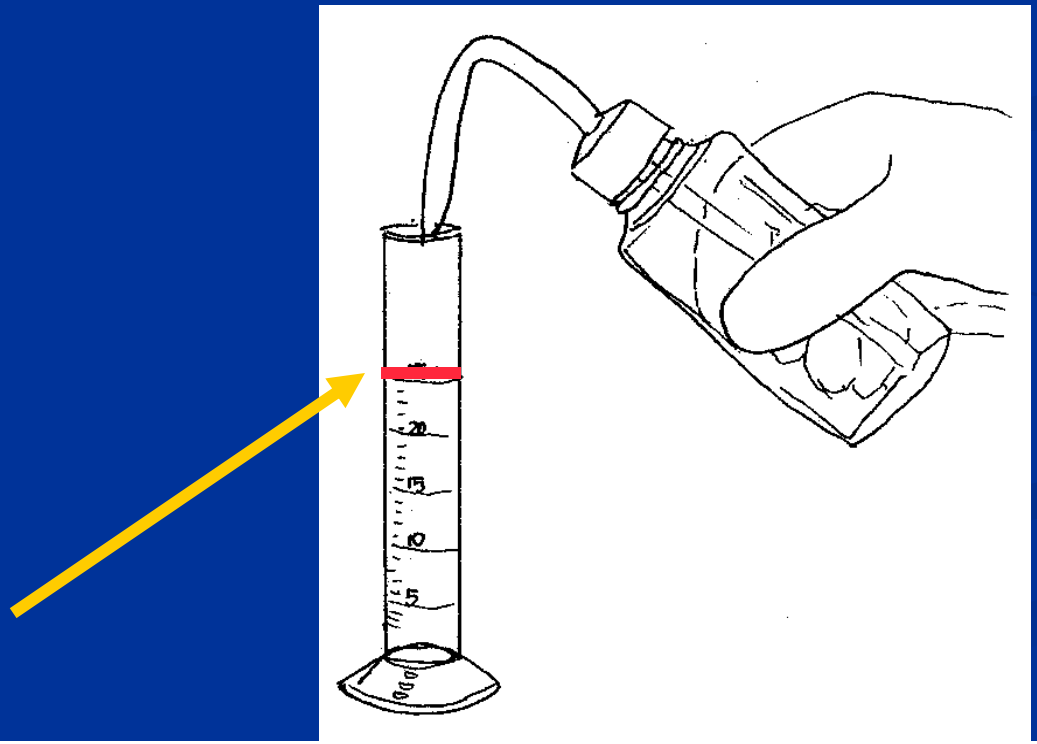

Third Standard: 25 ppm

- Pour 5-ml of the 50 ppm standard back into the 10-ml graduated cylinder
- Fill the cylinder to 10-ml with clean solvent
- This will cut the 50 ppm standard in half to be 25 ppm
- Pour this standard into a vial labeled “25 ppm”

Calibration to Prepared Standards

- Make sure InfraCal has been on for 1 hour
- Make sure cuvette is clean
- Zero InfraCal

Zeroing

- Fill the cuvette with clean solvent and place in the sample stage with the frosted side facing front.



Zeroing

- Press and hold the **ZERO** button until the display reads ***bAL***.

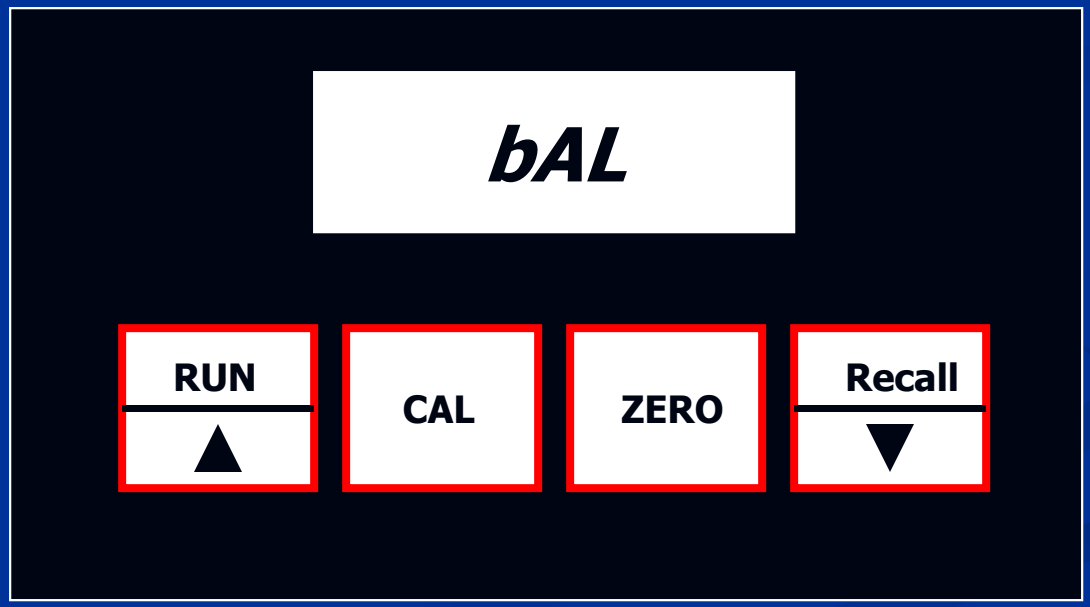

Zeroing

- A multiplier value to 3 decimal places will be displayed when zero is established. The actual value is only of interest when reporting problems to the factory

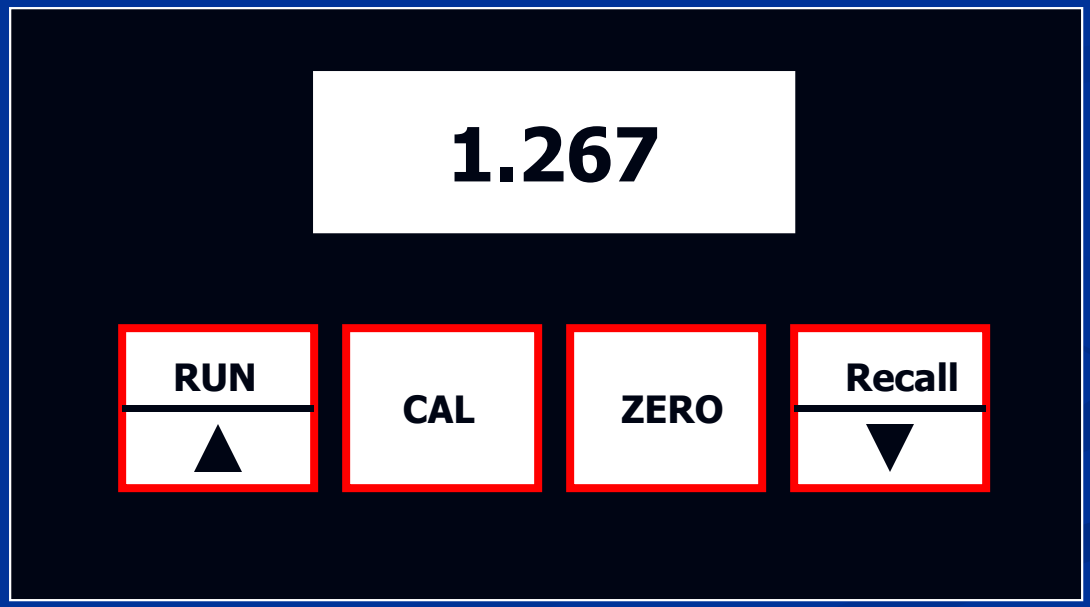

Zeroing

- Press **RUN**. The display should read 00 $\pm$ 02
  If not, repeat the zero process

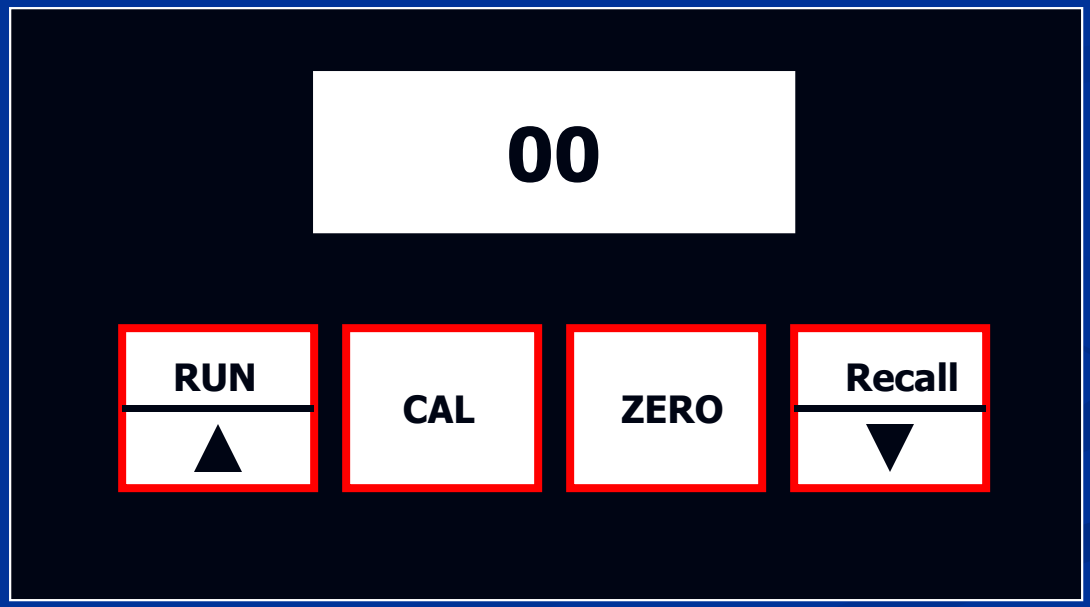

Calibration to Prepared Standards

- Run each standard at least 3 times on the InfraCal
- Average results for each standard
- Enter averaged results under the “A” in the manual on page 13 or 14 and the corresponding calibration value in the C column

Example Calibration Table

A Absorbance	C Calibration Standard
AO1= 42	CO1= 25
AO2= 81	CO2= 50
AO3= 149	CO3= 100

Entering Values into EDIT program

Make sure Cal Lock switch on the back of the InfraCal is in the "I" position

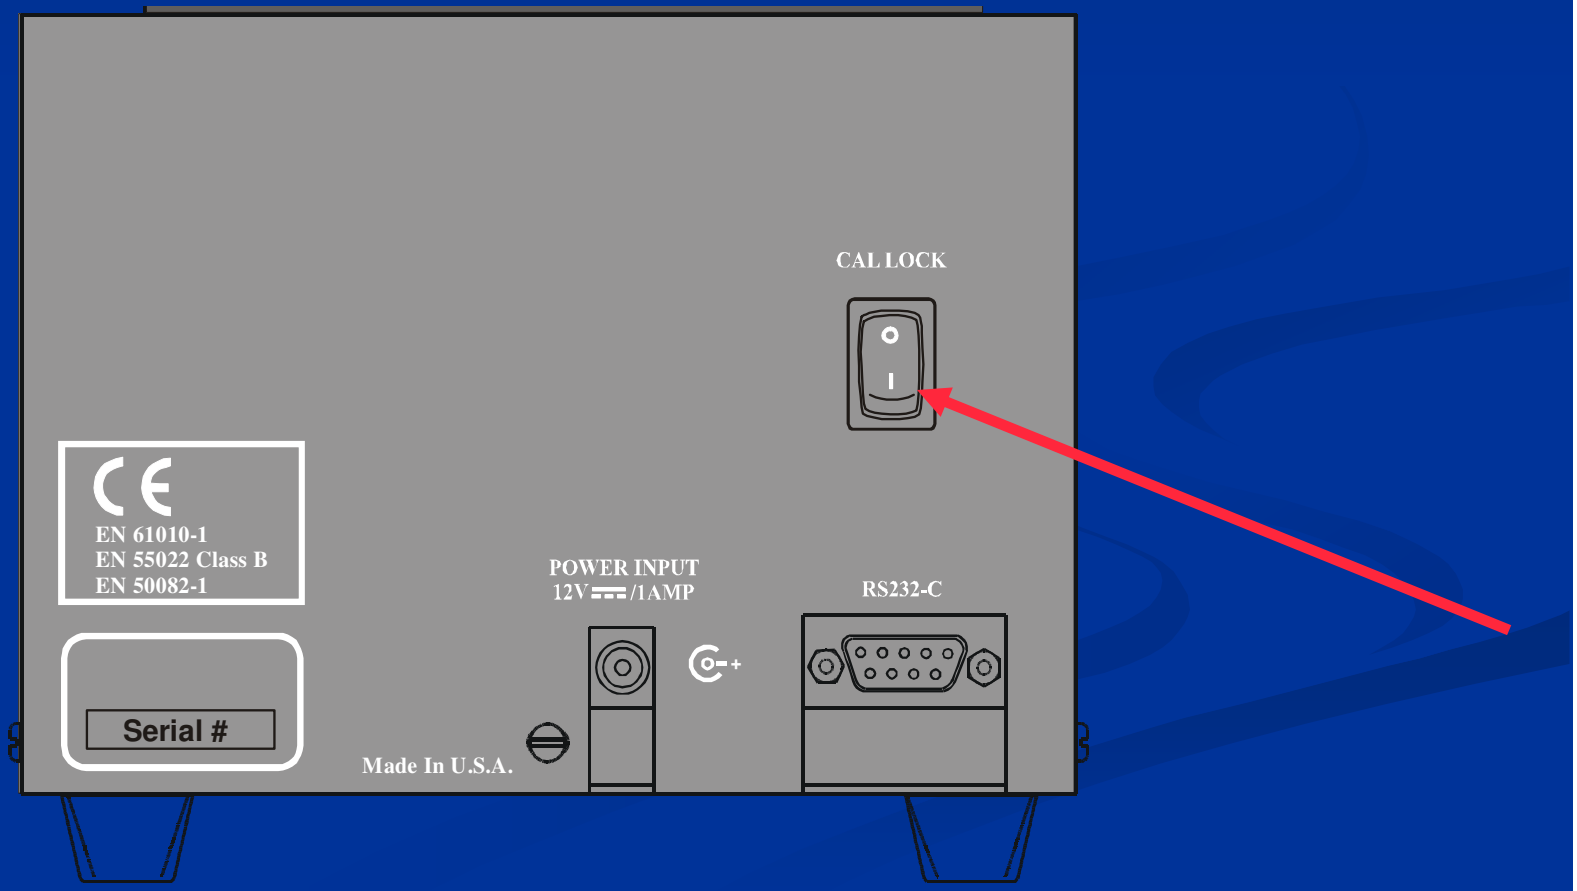

- Press the **CAL** button for two seconds, until ***CAL*** appears on the display

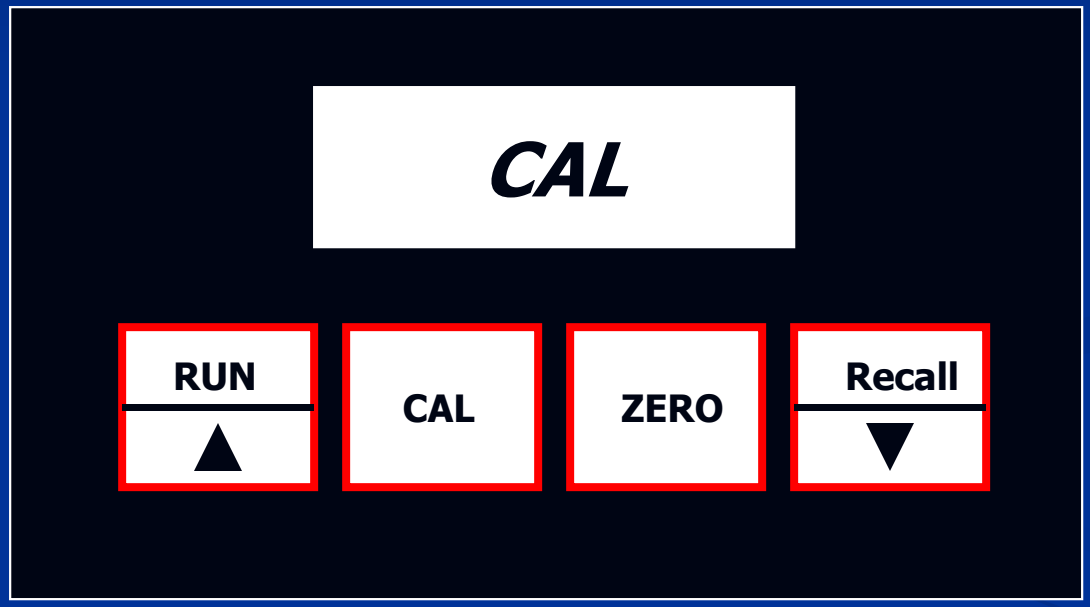

- Press **RECALL** until ***Edit*** is displayed

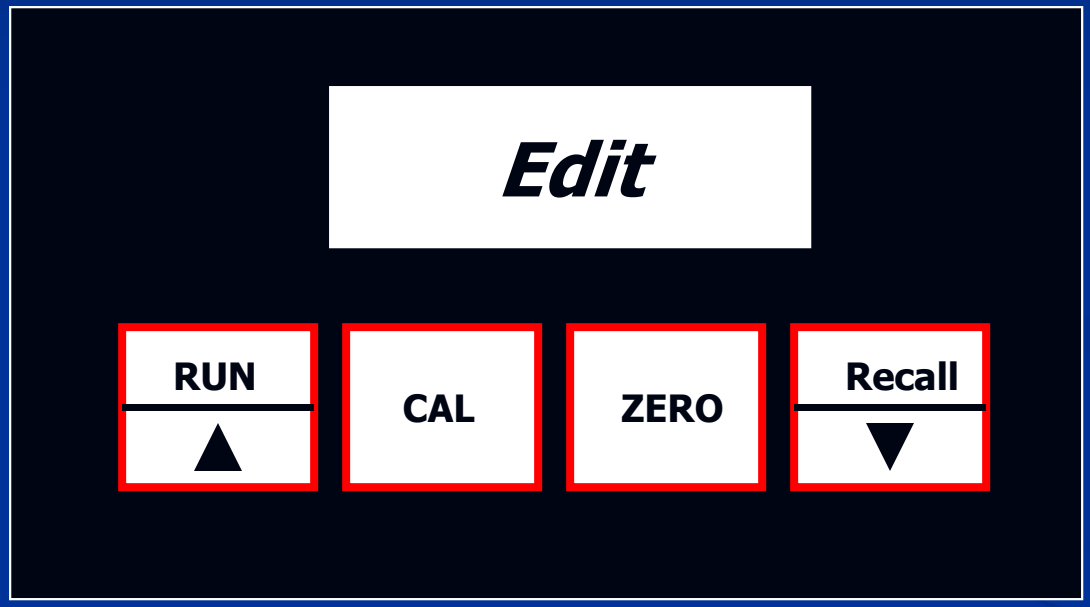

- Press **CAL** and the display will read ***n=*** for a short time

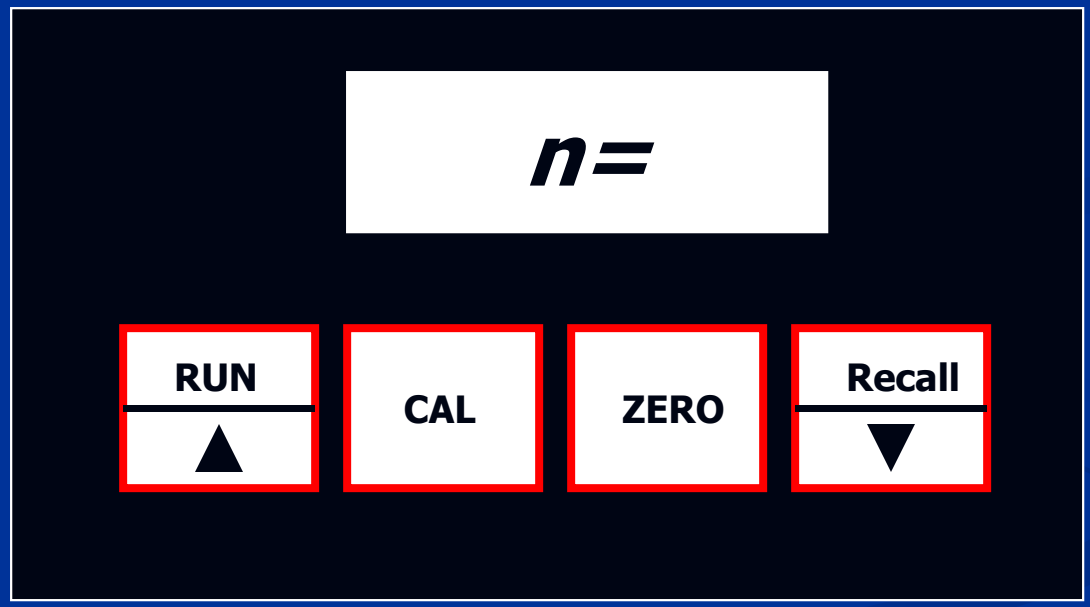

- Set ***n=*** to the number standards using the up and down arrows

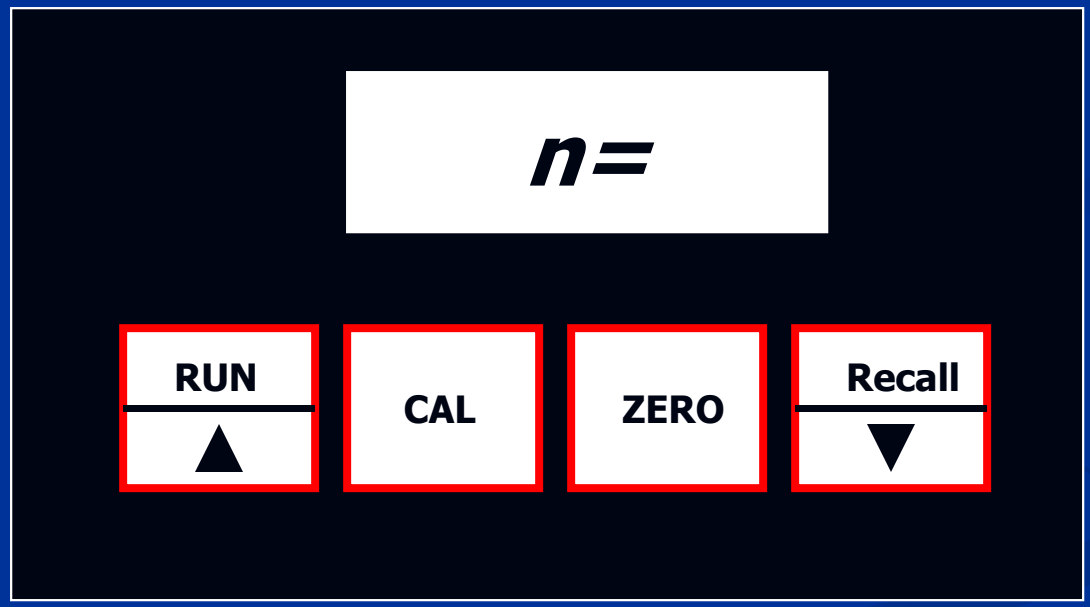

- Set ***n=*** to the number standards using the up and down arrows (for our example it will be 3)

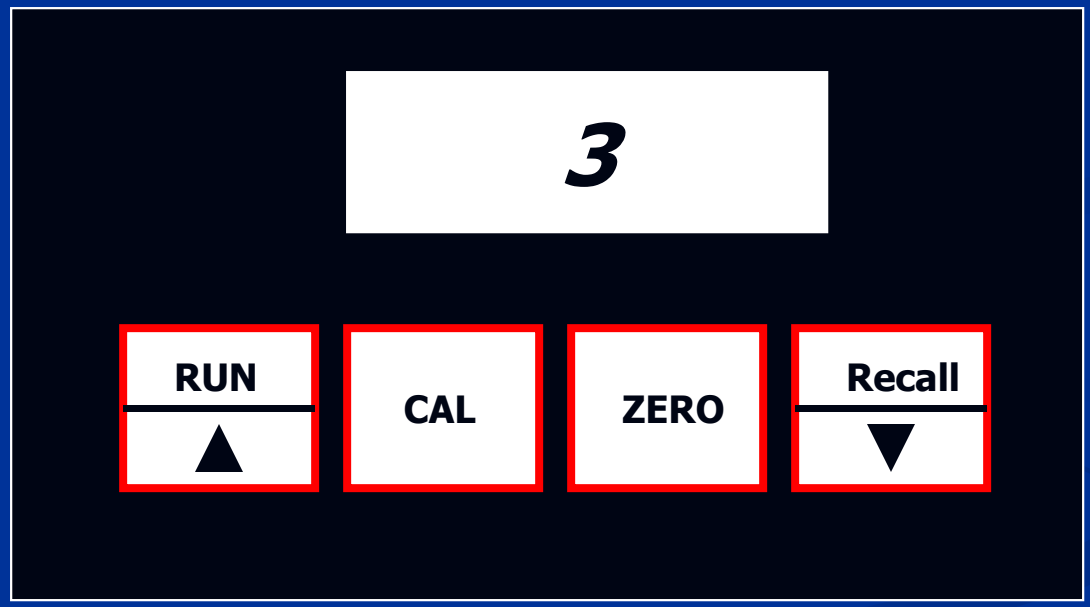

- Press CAL and the display will read ***A01=*** for a short time



- Using the up and down arrows, scroll to the first absorbance value (for our example it will be 42)

Absorbance	Calibration Standard
AO1= 42	CO1= 25
AO2= 81	CO2= 50
AO3= 149	CO3= 100

- Using the up and down arrows, scroll to the first absorbance value (for our example it will be 42)

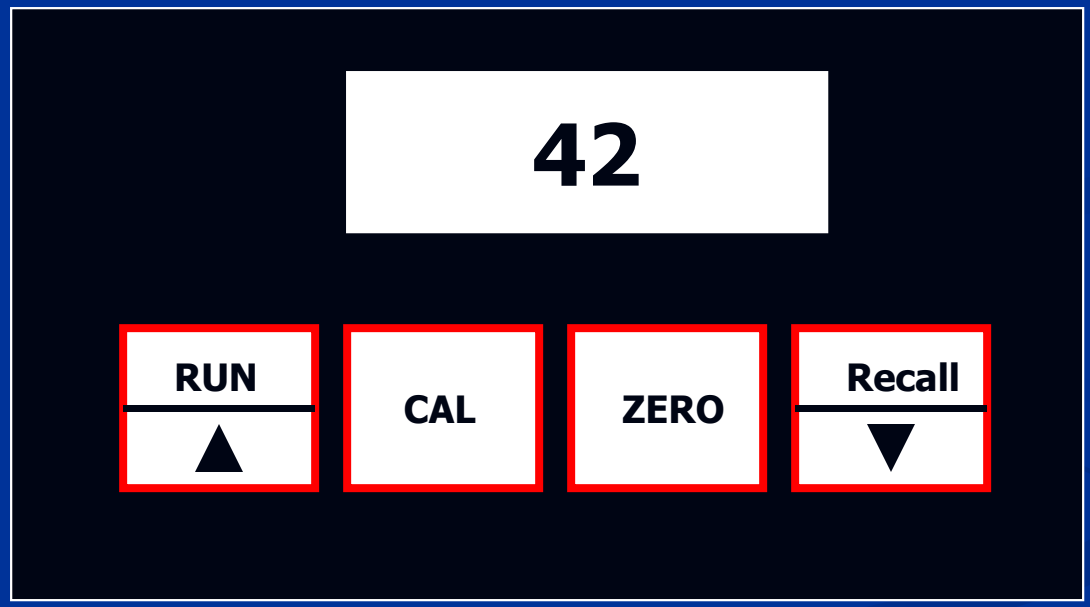

- Press **CAL** again and the display will read ***C01=***

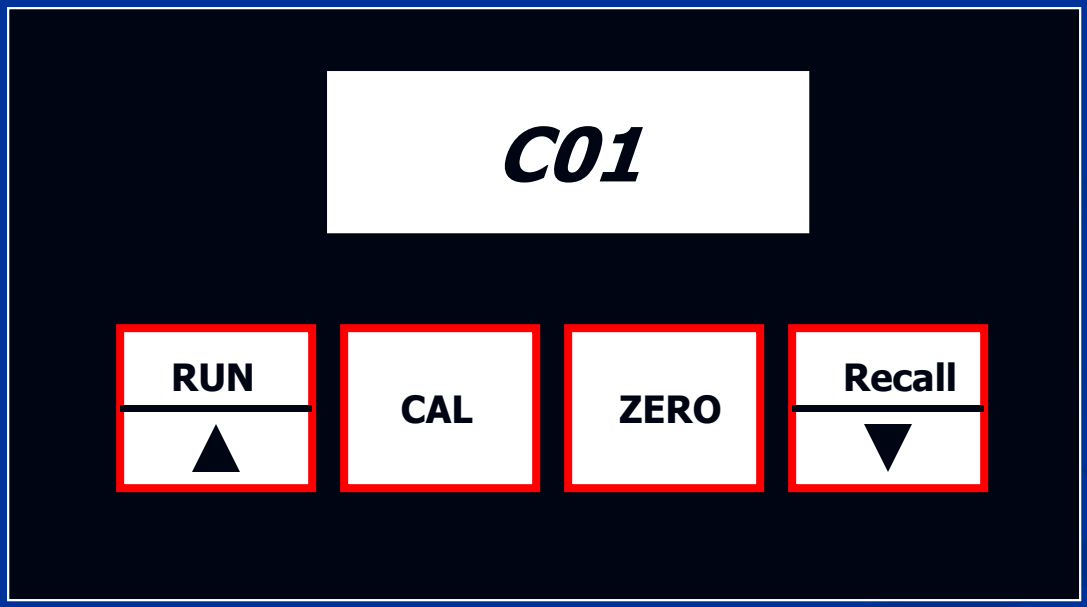

- Using the up and down arrows, scroll to the first calibration value (for our example it will be 25)

Absorbance	Calibration Standard
AO1= 42	CO1= 25
AO2= 81	CO2= 50
AO3= 149	CO3= 100

- Using the up and down arrows, scroll to the first calibration value (for our example it will be 25)

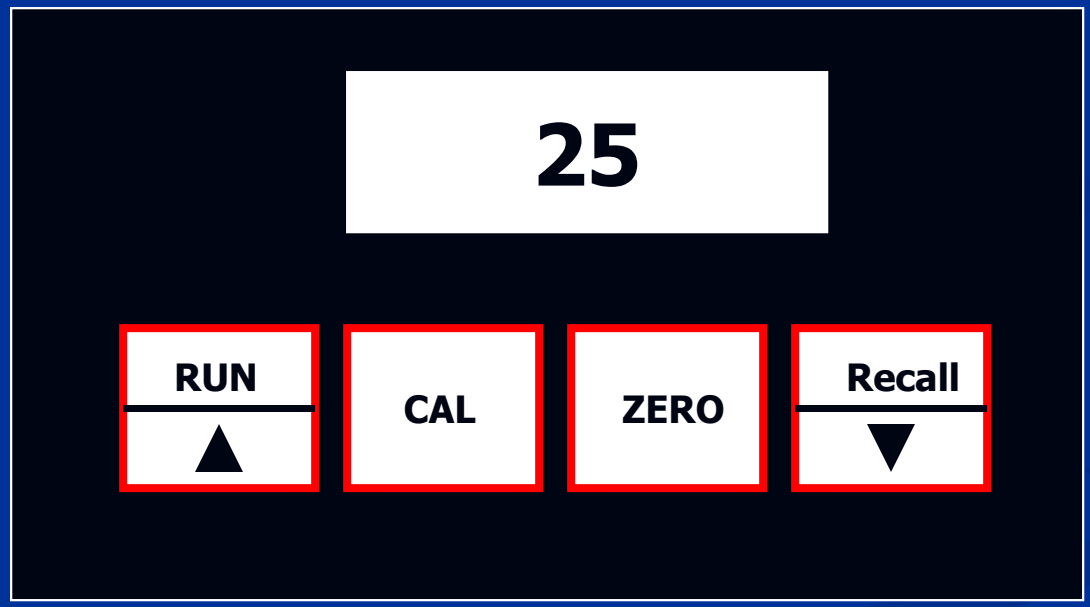

- Press **CAL** and the display will read ***AO2=*** for a short time. Using the up and down arrows, scroll to the first calibration value (for our example it will be 81)

Absorbance	Calibration Standard
AO1= 42	CO1= 25
AO2= 81	CO2= 50
AO3= 149	CO3= 100

- Press **CAL** again and the display will read ***C02=*** Scroll this to the second calibration value

Absorbance	Calibration Standard
AO1= 42	CO1= 25
AO2= 81	CO2= 50
AO3= 149	CO3= 100

- Do the same for AO3 and CO3

Absorbance	Calibration Standard
AO1= 42	CO1= 25
AO2= 81	CO2= 50
AO3= 149	CO3= 100

- Press CAL again and the display will read IDLE

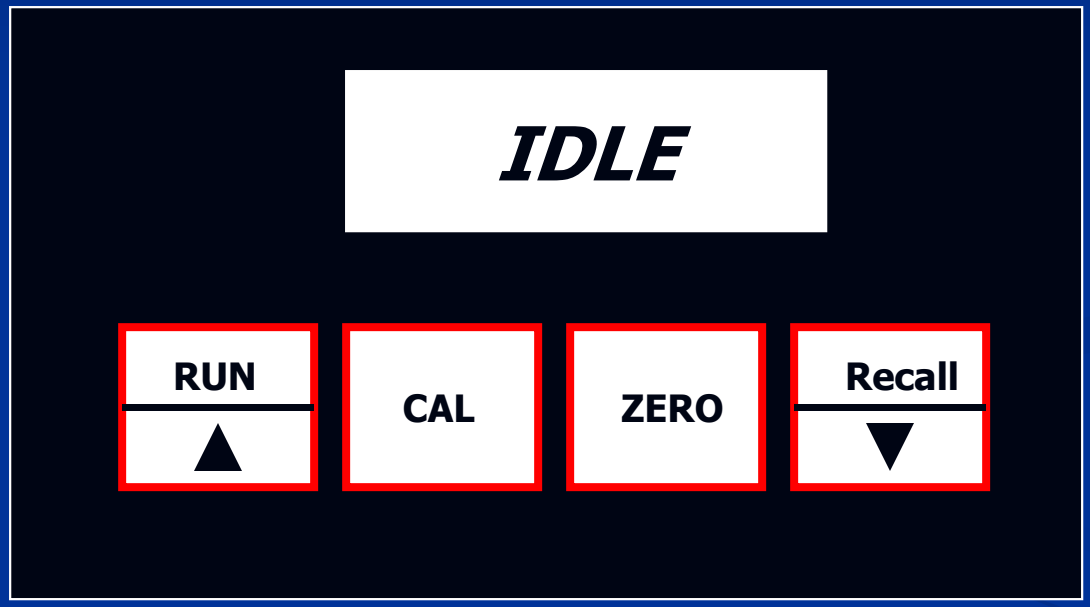

The calibration is now stored and the calibration is now active in the InfraCal

InfraCal TOG/TPH Analyzer,
Model CVH
Calibration



wilks
simple analytical solutions

For questions please contact us at:
tech@WilksIR.com, or 203-855-9136